



Viskositätstabellen „Konturflows“

Niedrige Viskosität – Low Viscosity (PA, PE, PC, PP, PET, PVC, PS, SB, TPA, TPE, TPU)

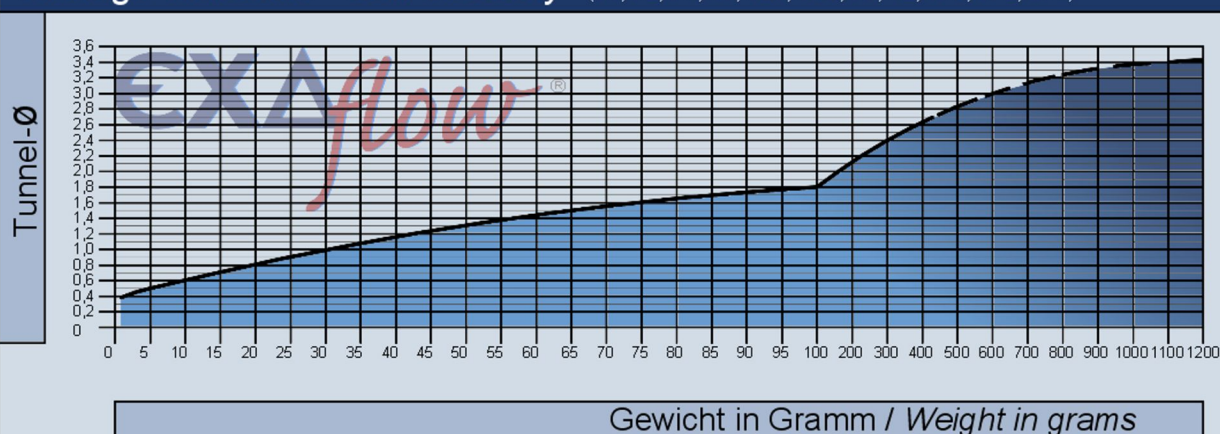

Mittlere Viskosität - Medium Viscosity (ABS, ASA, PS, PC/ABS, PBT, SAN)

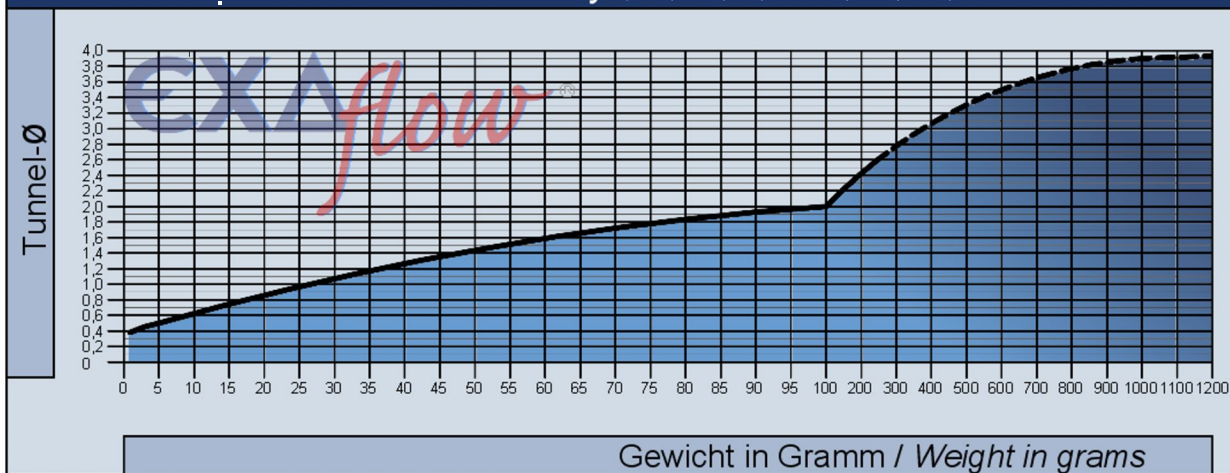

Hohe Viskosität - High Viscosity (PC, PPS, PSU, POM-H, PES, PPO, PEI, PC-ABS, PC-PBT, PMMA, PVC)

